

Being familiar immediately


Thank you for you using this jammer , Now, let me introduce and make you have better understanding about the positions of all the buttons, function of accessories and other hardware



Left side elevation




Right side elevation

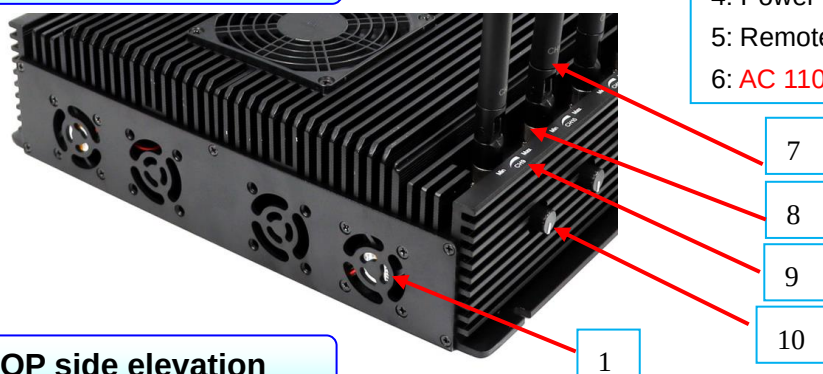

TOP side elevation

- 7: Omni Antennas
- 8: Channel Pilot lamp
- 9: Channel No.1-12 or 16 or 18
- 10: Adjust Power Switch
- 11: SMA Connector
- 12: Remote Control ON/OFF

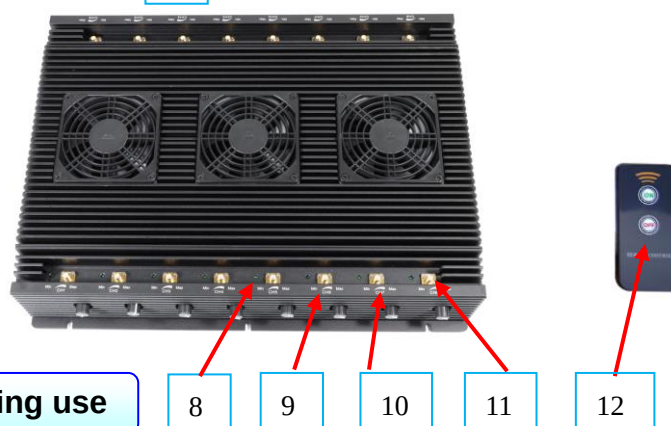

Open the packaging and Starting use

Carefully open the packaging box and reserve it, In order to load or ship in the future.

Please check whether all the things are kept in good condition or not. If you encounter the bad condition of the elements or being damaged, please contact with your dealer immediately.

Connecting system

Please connect the antenna according to the channel number. After connecting all of the subassemblies, please connect one side (DC) of power supply wire into the device's power port, and connect the other side to the power supply jack.



Turning on your jammer

Option 1: Local control

After connected all of antenna, please press the switch of left side to ON then the jammer will be working normally. The power and each channel pilot lamp will be green.



Option 2: Remote control

After connected all of antenna, please press the switch of left side to ON then the jammer will standby. Press infrared remote control ON key,  It will be working normally. The power and each channel pilot lamp will be green.

Adjustable Switcher

Finding the adjustable switch of system's to adjust each band's RF power output level or turn off without influencing the other bands' operation.



Turning off your jammer

Option 1: Local control

please press the switch of left side to OFF then the jammer will be turned off.

Option 2: Remote control

Press infrared remote control OFF key,  The device is standby. If you want to turn ON device again, please press remote control ON again. If you want to turn OFF device, please press the switch of left side to OFF then the jammer will be turned OFF.

Notices

- ⦿ Before linking all the antenna, power supply shall not be switched on at first. Non-taking off antenna when the mainframe is in the working condition.
- ⦿ The jammer shall be installed in the position with good ventilation. And largescale things shall be avoided to ensure to the shielding effect.
- ⦿ When use the jammer outdoors, preventing water shall be taken into consideration.
- ⦿ Antenna shall be used vertical to the ground.
- ⦿ If you used in car, Please connect with inverter DC12V or 24V to 110-240V, **this machine only can be working on AC110-240V, The Minimum output power of storage battery is 500Watt.**